

# RADIATOR FAN ASSEMBLIES

## Market Leading Coverage

Offering over 900 SKUs, covering over 240 million repair opportunities



**621-353**

Ford Crown Victoria, Town Car, Grand Marquis 2011-06


### DROP-IN REPLACEMENT

#### UNPROFITABLE



Typical Motor Replacement

#### PROFITABLE

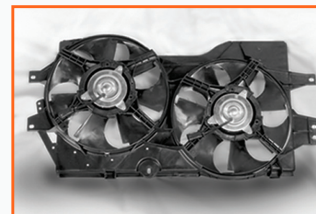

Dorman Replacement

- Program includes Dorman Exclusive SKUs ensuring the broadest coverage in the Aftermarket
- Fan Motors are tested at independent laboratories to ensure quality & durability

## ADDITIONAL RADIATOR FAN ASSEMBLIES



**620-035**

Dodge Ram Trucks 2008-02



**620-141**

Ford Trucks 2010-06



**620-565**

Toyota 4Runner, FJ Cruiser, Tacoma, Tundra 2015-03



**620-805**

Audi, Volkswagen 2015-05



**621-526**

Chrysler 300, Dodge Challenger, Charger 2015-09

Think It's Dealer Only? **Check Dorman First!**

# RADIATOR FAN ASSEMBLIES

## HIGHLIGHTED COVERAGE

APPLICATIONS	DORMAN #
Acura MDX 2013-10	<b>621-519</b>
Audi 2004-00, Volkswagen 2014-11, Volkswagen 2005-99	<b>620-799</b>
Audi A4 2009-02, Audi A4 Quattro 2009-02	<b>620-806</b>
Audi RS4 2008-07, Audi S4 2009-04	<b>620-836</b>
Buick Verano 2014-12, Chevrolet Cruze 2014-11	<b>620-658</b>
Cadillac 1999, Chevrolet 2015-03, Chevrolet 2000-97, GMC 2015-03, GMC 2000-97	<b>621-515</b>
Cadillac CTS 2013-09, Cadillac SRX 2009, Cadillac STS 2011-09	<b>620-567</b>
Chevrolet 2007-96, GMC 2007-96, Hummer 2007-03, Oldsmobile 2001-96	<b>620-602</b>
Chevrolet 2008-01, GMC 2008-01	<b>621-514</b>
Chevrolet Cavalier 2004-95, Pontiac Sunfire 2004-95	<b>620-600</b>
Chevrolet Cobalt 2010-05, Pontiac G4 2006-05, Pontiac G5 2010-07	<b>620-635</b>
Chevrolet Impala 2003-00, Chevrolet Monte Carlo 2003-00	<b>620-616</b>
Chrysler 2000-96, Dodge 2000-96, Plymouth 2000-96	<b>620-003</b>
Chrysler 2005-01, Dodge 2005-01	<b>620-018</b>
Chrysler 300 2008-05, Dodge Challenger 2009-08, Dodge Charger 2008-06, Dodge Magnum 2008-05	<b>620-039</b>
Chrysler 300 2014-09, Dodge Challenger 2015-09, Dodge Charger 2015-09	<b>621-526</b>
Chrysler PT Cruiser 2008-01	<b>620-022</b>
Chrysler PT Cruiser 2010-06	<b>620-052</b>
Chrysler Town & Country 2007-05, Dodge Caravan 2007-05, Dodge Grand Caravan 2007-05	<b>620-042</b>
Dodge Journey 2015-10	<b>620-036</b>
Dodge Ram 1500 2008-02, Dodge Ram 2500 2007-03, Dodge Ram 3500 2007-04	<b>620-035</b>
Ford 1997-92	<b>620-151</b>
Ford 2004-85, Mercury 1986-85	<b>620-112</b>
Ford 2005-03, Lincoln 2005-03, Mercury 2005-03	<b>620-120</b>
Ford 2010-06, Lincoln 2010-07, Mercury 2010-06	<b>620-141</b>
Ford 2015, Ford 2013-97, Lincoln 2015-10	<b>620-422</b>
Ford Crown Victoria 2011-06, Lincoln Town Car 2011-06, Mercury Grand Marquis 2011-06	<b>621-353</b>

## HIGHLIGHTED COVERAGE

APPLICATIONS	DORMAN #
Ford Fiesta 2015-11	<b>621-503</b>
Ford Fusion 2012-10, Lincoln MKZ 2012-10	<b>621-506</b>
Ford Mustang 2004-99	<b>620-138</b>
Ford Ranger 2008-95	<b>620-148</b>
Honda Accord 1997-94, Honda Prelude 1998-97	<b>620-240</b>
Honda Accord 2002-98	<b>620-227</b>
Honda Civic 2005-01	<b>620-219</b>
Honda CR-V 2006-02, Honda Element 2009-03	<b>620-232</b>
Hyundai Elantra 2013-11	<b>621-528</b>
Hyundai Tucson 2013-10, Kia Sportage 2013-11	<b>621-516</b>
Jeep Cherokee 2001-87, Jeep Comanche 1992-87, Jeep Wagoneer 1990-87	<b>620-001</b>
Jeep Grand Cherokee 2003-99, Jeep Liberty 2003-02	<b>620-010</b>
Jeep Grand Cherokee 2004	<b>620-041</b>
Jeep Grand Cherokee 2004-99	<b>620-070</b>
Jeep Liberty 2004-02	<b>620-038</b>
Kia Forte 2010, Kia Forte Koup 2010	<b>621-529</b>
Mini Cooper 2012-07	<b>621-508</b>
Nissan 2015-10, Nissan 2008-06, Nissan 2004-90	<b>620-450</b>
Saturn Ion 2007-03	<b>620-691</b>
Scion tC 2015-11	<b>621-518</b>
Subaru Forester 2013-09, Subaru Impreza 2013-08, Subaru WRX 2012	<b>620-803</b>
Toyota 4Runner 2015-03, Toyota FJ Cruiser 2014-07, Toyota Tacoma 2015-05, Toyota Tundra 2014-05	<b>620-565</b>
Toyota Highlander 2012-09	<b>621-531</b>
Toyota Sienna 2015-11	<b>621-530</b>

Think It's Dealer Only? **Check Dorman First!**